



## features & benefits

For a premium quality roll-up you can't get much better than the CORE<sup>®</sup> flip<sup>™</sup> banner.

Graphics for the flip<sup>™</sup> banner are inter-changeable - just press the buttons to 'flip' the lid open, change the panel and then close the lid and you are ready to go.

CORE<sup>®</sup> flip<sup>™</sup> banners have adjustable feet, are supplied in padded bags and are available in 2 different sizes.



flip<sup>™</sup> banners have interchangeable graphics. Simply press the buttons to 'flip' the lid up



flip<sup>™</sup> banners are available in 850mm and 1000mm widths



## banner sizes & dimensions

For a premium quality roll-up you can't get much better than the CORE<sup>®</sup> flip<sup>™</sup> banner.

Graphics for the flip<sup>™</sup> banner are inter-changeable - just slide the blue catches to 'flip' the lid open, change the panel and then close the lid and you are ready to go.

### RECOMMENDED PANEL THICKNESS

no more than 300 microns total thickness

flip<sup>™</sup>  
- 850mm -



### PANEL SIZE

2400mm x 850mm

### VISIBLE SIZE

2150mm x 850mm

flip<sup>™</sup>  
- 1000mm -



### PANEL SIZE

2400mm x 1000mm

### VISIBLE SIZE

2150mm x 1000mm

## graphic installation

CORE<sup>®</sup> flip<sup>™</sup> banners feature fully interchangeable graphics using panel strips that simply slide into the aluminium extrusions on the banner. Panels are easy to change, are very strong when installed and need no cartridges or cassettes. Whilst we recommend that panels are changed by your graphic supplier, it is quite easy to do by following these instructions.



**Step 1:** Apply supplied panel strips to the top and bottom of the panel with the two strips of double sided tape on each panel strip.



**Step 2:** Slide the panel strip at the top of the panel onto the banner rail until it lines up centrally. Secure the panel with tape to prevent movement if desired.



**Step 3:** Slide the blue catches at each end of the banner to flip open the lid and remove the roller. be careful not to remove the locking pin in the roller.



**Step 4:** Slide the panel strip at the bottom of the panel along the roller extrusion. Place the roller back into the base lining it up so it sits back neatly into place.



**Step 5:** Close the lid and pull out the locking pin at one end of the banner to tension the graphic. Hold the graphic and release it gently into the base.